

H01738

## DISASSEMBLY


### 1. w/o Power Window:

#### REMOVE REGULATOR HANDLE

Pull off the snap ring with a shop rag and remove the regulator handle and plate.

HINT:

At the time of assembly, please refer to the following item.  
With the door window fully closed, install the plate and the regulator handle with the snap ring.

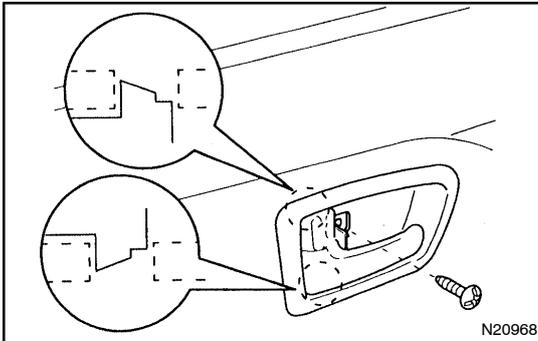

N20968

### 2. REMOVE INSIDE HANDLE BEZEL

- (a) Using a screwdriver, pry open the screw cover and remove the screw.

HINT:


Tape the screwdriver tip before use.

- (b) Using a screwdriver, pry out the bezel.

HINT:

Tape the screwdriver tip before use.

### 3. REMOVE FRONT WINDOW UPPER GARNISH

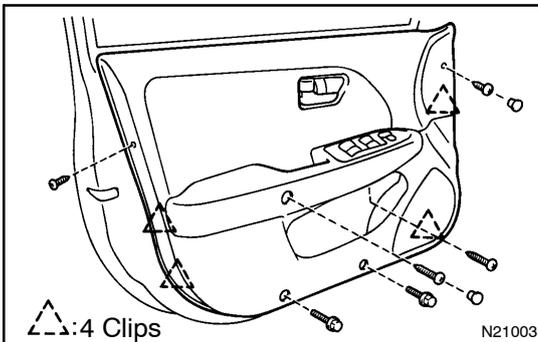

△:4 Clips

N21003

### 4. REMOVE DOOR TRIM

- (a) Using a screwdriver, remove the screw caps.

HINT:

Tape the screwdriver tip before use.

- (b) Remove the 2 clips, 2 screws and 2 bolts.

- (c) Insert a screwdriver between the door and door trim to pry out.


- (d) Pull the trim upward to remove it, then remove the power window switch and disconnect the harness connector.

### 5. REMOVE THESE PARTS:

- (a) Outside rear view mirror

**Torque: 5.5 N·m (55 kgf·cm, 49 in·lbf)**

- (b) Speaker

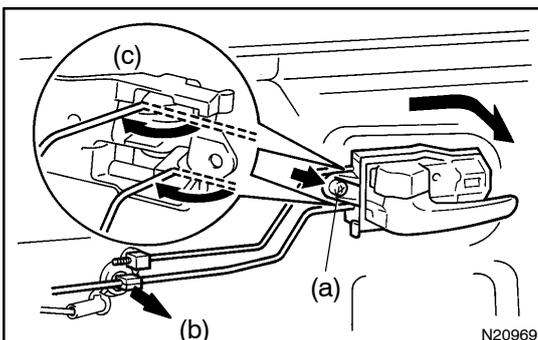

N20969

### 6. REMOVE DOOR INSIDE HANDLE

- (a) Remove the screw and pull the handle forward.


**Torque: 3.5 N·m (35 kgf·cm, 31 in·lbf)**

- (b) Remove the link from the clamp.

- (c) Remove the inside handle from the ends of the 2 links.

### 7. REMOVE SERVICE HOLE COVER

Remove the grommet, then remove the service hole cover.

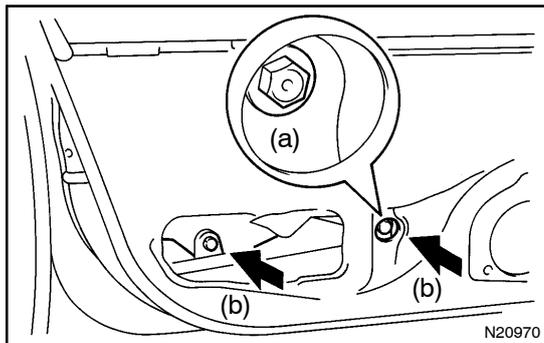**8. REMOVE DOOR GLASS**

(a) Open the door glass until the bolt appears in the service hole.

(b) Remove the 2 bolts and the door glass.

HINT:

Pull the glass upward.

**Torque: 8.0 N·m (80 kgf·cm, 71 in·lbf)**

**9. REMOVE GLASS RUN**

HINT:


Pull the glass run upward.

**10. REMOVE FRONT AND REAR SIDE FRAMES**


Remove the 2 bolts, 2 nuts and the side frames.

HINT:

Remove the side frames through the service hole.

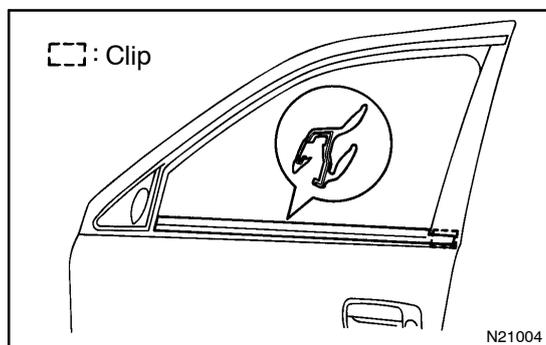**11. REMOVE FRONT DOOR BELT MOULDING**

Pry the rearward end of the front door belt moulding from the door and remove the moulding.

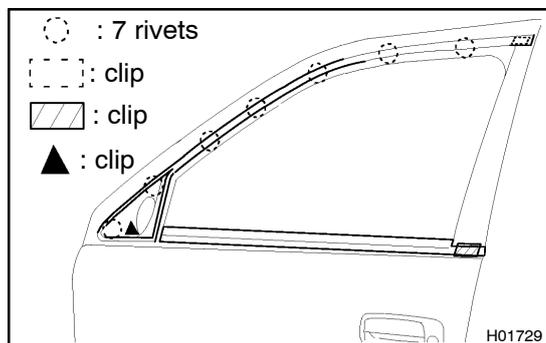**12. REMOVE FRONT DOOR UPPER MOULDING**


(a) Using a drill, cut the flange portion of the 7 rivets.

HINT:

At the time of assembly, please refer to the following item.

Use 7 new rivets.

(b) Pry out the 2 clips and remove the moulding.

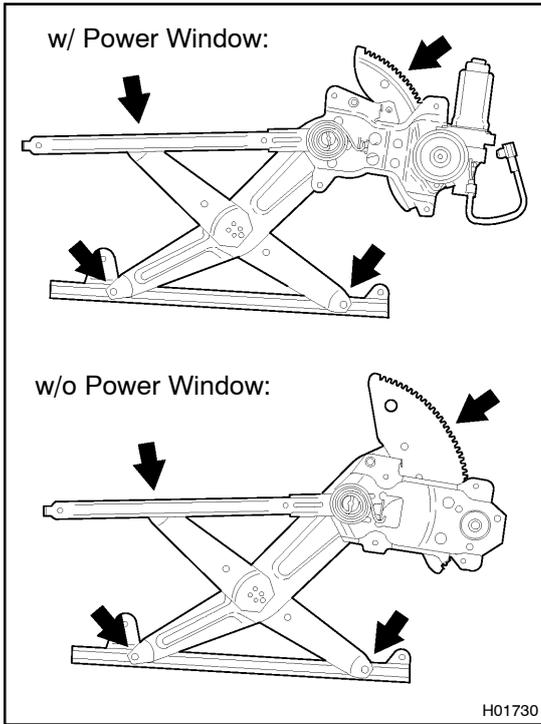

**13. REMOVE WINDOW REGULATOR ASSEMBLY**

Remove the bolts and window regulator.

**Torque: 5.5 N·m (55 kgf·cm, 49 in·lbf)**


HINT:

At the time of reassembly, please refer to the following item.  
Apply MP grease to the window regulator rollers.

**14. w/ Power Window:**

**REMOVE MOTOR FROM WINDOW REGULATOR**

Remove the 3 screws and motor.

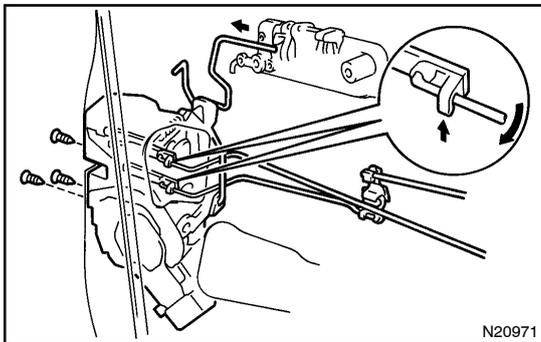

**15. REMOVE DOOR LOCK**

- (a) Remove the 2 clips.
- (b) Disconnect the 2 links from the door lock and remove the links.
- (c) Disconnect the 2 links from the outside handle and the lock cylinder.
- (d) Remove the 3 screws and door lock.


HINT:

At the time of reassembly, please refer to the following item.  
Apply adhesive to 3 screws.

**Part No. 08833-00070, THREE BOND 1324 or equivalent**

**Torque: 5.0 N·m (50 kgf·cm, 43 in·lbf)**

- (e) w/ Power Door Lock:  
Disconnect the connector.
- (f) Remove the door lock through the service hole.

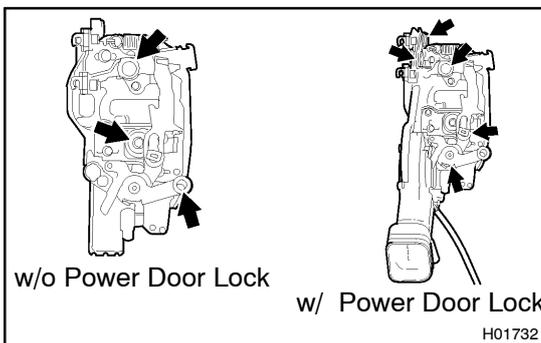

HINT:

At the time of reassembly, please refer to the following item.  
Apply MP grease to the sliding surface of the door lock.

**16. REMOVE OUTSIDE HANDLE**

**Torque: 7.0 N·m (70 kgf·cm, 61 in·lbf)**